

Hafele Spacer Brackets (6195) User Guide.



Introduction

Overview


- This Package adds the Hafele Spacer Brackets 6195 Art No:558.12.836 to a Rollout drawer in Cabinet Vision Solid.
- They activate when the hinge rollout clearance is 25mm or 1 inch, and the hinge is on the cabinet end.
- They can also be activated manually, by increasing the rollout side clearance, as outlined below.
- Spacers are then added to the first and last guide holes.
- Each Spacer has 2 holes drilled into the cabinet ends, and the guide holes are then hidden.

Default Settings

UCS Public Variables

There are two Public Variables for the Spacer Bracket UCS, for the drilling sizes.

To change these variables go to the Utilities – Edit User Created Standards from the Room Plan or Elevation views

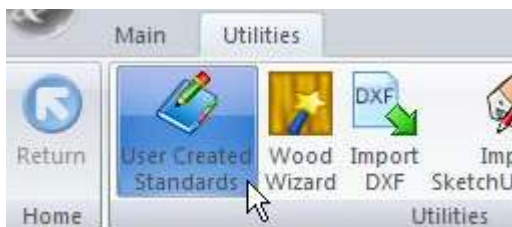

Then click on the “{ DRAWS }-- Hafele Spacer Brackets”, The Public Variables are on the top right of the screen:

Public Variables	
Hole Depths	12mm
Hole Diameters	5mm
Mounting Holes	Center

1. Hole Depths
2. Hole Diameters

The depth of the Spacer Bracket Holes
The diameter of the Spacer Bracket Holes

Spacer Bracket Usage


Activate from your Hinge Rollout Clearance:

Firstly ensure the hinge you are using has a Rollout Clearance of 25mm or 1 inch as shown here:


- [Hinge Material Manager:](#)

	Material	Hinge	Finishes	Finish Types	Textures		
Name	Type	Inset	Maximum ...	Opening An...	Door Edge To Re...	Roll Out Clear...	
Blum ClipTop Insrta 107	Concealed	-2	750	107.000	22.50	25	
Blum ClipTop Expndo Cen	Concealed	-2	750	-70.000	22.50	0	

Now, when the rollout is mounted on the cabinet end, the Spacer Brackets will activate automatically:

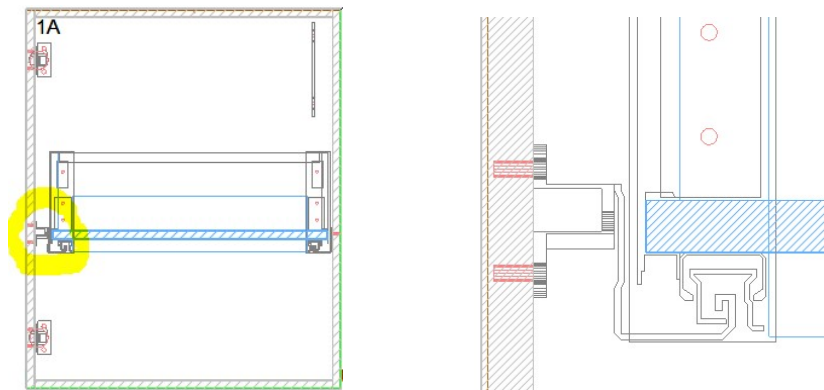

NOTE: If the rollout is mounted on a partition, and the door is hinged off the partition also, the rollout will move over, but the Spacer Brackets will not activate. To activate in this situation refer to the manual activation method shown below...

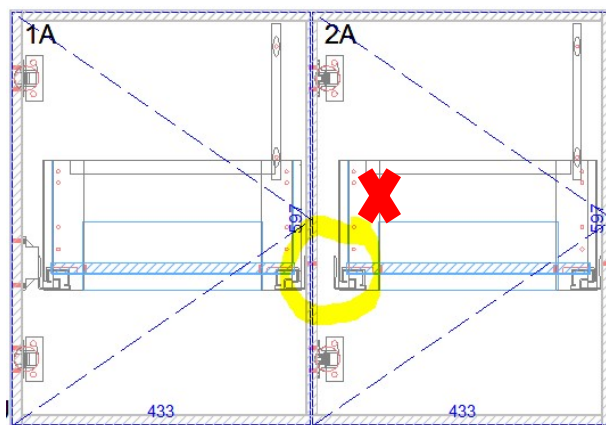


Activate Manually:

If your hinges do not have a rollout clearance or the rollout is mounted on a partition as shown above or any other situation where the spacer Brackets do not appear, simply increase the rollout side clearance by 25mm or 1 inch.

- For Metric, type in “-25” next to THE EXISTING value, and press ENTER.

- For Imperial, type in "-1" next to THE EXISTING value, and press ENTER.

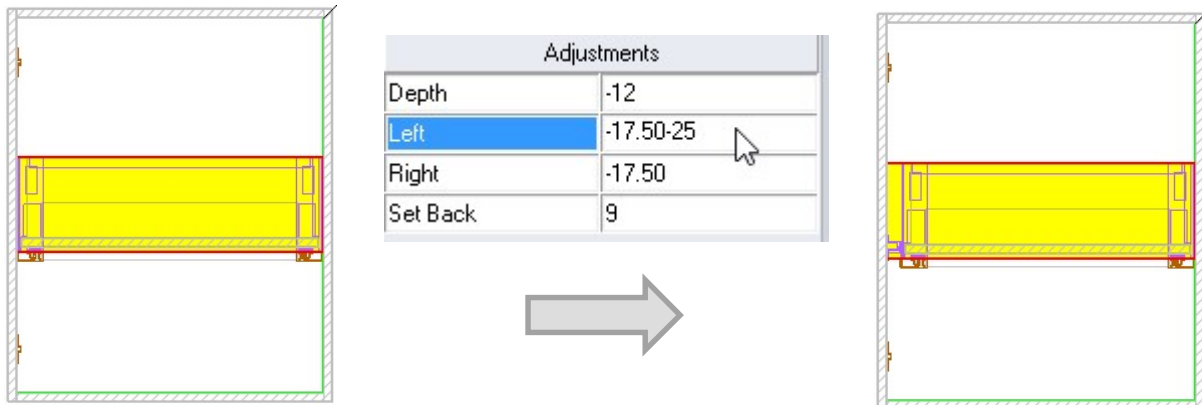

Package Exclusions

Some of the items shown in various images contained in this document are not included in the Hafele Spacer Brackets Package, but come from other packages which are sold separately.

- Hafele Drawers.
- Hafele Hinges.

See our website for more detailed information on these packages.