


## Part Overrides User Guide.

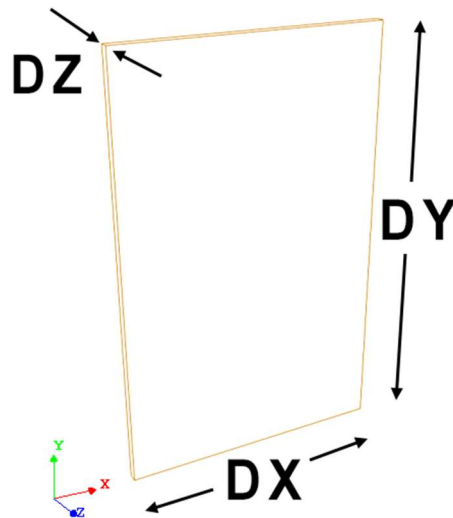

### Introduction

#### Overview

- This Package adds attributes to your parts to allow adjustment of their sizes and positions in Cabinet Vision.
- Part sizes and positions can be adjusted or overridden without affecting intelligence of part.
- Part X Y and Z positions can be adjusted from current position and returned back to default.
- Part X Y and Z positions can be overridden to any value and returned back to default.
- Part DX DY and DZ sizes can be adjusted from current size and returned back to default.
- Part DX DY and DZ sizes can be overridden to any value and returned back to default.

### Included in This Package

#### User Created Standards

The Following UCS is provided;

- { PARTS } -- Adjustments      Adds the attributes to the part and performs the adjustments

## Part List

### Parts Included in the UCS:


Name	Part Description
LU	Left Unfinished End
RU	Right Unfinished End
LF	Left Finished End
RF	Right Finished End
S_LSE	Left Sub End
S_RSE	Right Sub End
UB	Unfinished Back
FB	Finished Back
TO	Top
TS	Top Stretcher
NA	Nailer
BO	Bottom
DE	Deck

Name	Part Description
PT	Partition
S_DIV	Divider
AS	Adjustable Shelf
SH	Shelf
FS	Fixed Shelf
DS	Drawer Stretcher
PANEL	Panel
FILLER	Filler
BT	Back Toe
FT	Front Toe
ST	Side Toe
SL	Sleeper

## Part Attributes Usage

### Part Attributes:

Use the following part attributes to adjust or override the size or position of your parts. Changing any attribute back to zero will return the parts system intelligence for that parameter. Changing the main Part Adjust? Attribute back to false will reset all the attributes to zero and fully return the part to its system intelligence – removing size and position overrides.

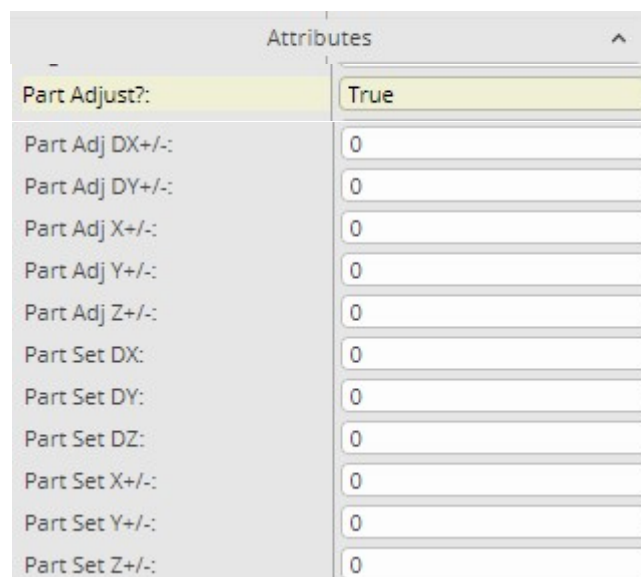

Attributes	
Part Adjust?:	True
Part Adj DX+/-:	0
Part Adj DY+/-:	0
Part Adj X+/-:	0
Part Adj Y+/-:	0
Part Adj Z+/-:	0
Part Set DX:	0
Part Set DY:	0
Part Set DZ:	0
Part Set X+/-:	0
Part Set Y+/-:	0
Part Set Z+/-:	0

**Prompt:**

Part Adjust?:

Part Adj DX +/-  
Part Adj DY +/-  
Part Adj X +/-  
Part Adj Y +/-  
Part Adj Z +/-  
Part Set DX +/-  
Part Set DY +/-  
Part Set DZ +/-  
Part Set X +/-  
Part Set Y +/-  
Part Set Z +/-

**Description:**

True=Shows/False=Hides+Resets the following 11 attributes on the part

Adjust the DX (Width) of the part larger or smaller with a +/- value.  
Adjust the DY (Length) of the part larger or smaller with a +/- value.  
Adjust the X Position of the part left or right with a +/- value.  
Adjust the Y Position of the part up or down with a +/- value.  
Adjust the Z Position of the part forward or back with a +/- value.  
Set the DX (Width) of the part to this value.  
Set the DY (Length) of the part to this value.  
Set the DZ (Thickness) of the part to this value.  
Set the X Position of the part to this value.  
Set the Y Position of the part to this value.  
Set the Z Position of the part to this value.

## Package Exclusions

There may be some items shown in various images contained in this document which are not included in this Package. Any items not specifically mentioned in this guide are part of our other packages which are sold separately.

See our website for more detailed information on these packages.